

Aluminum structure

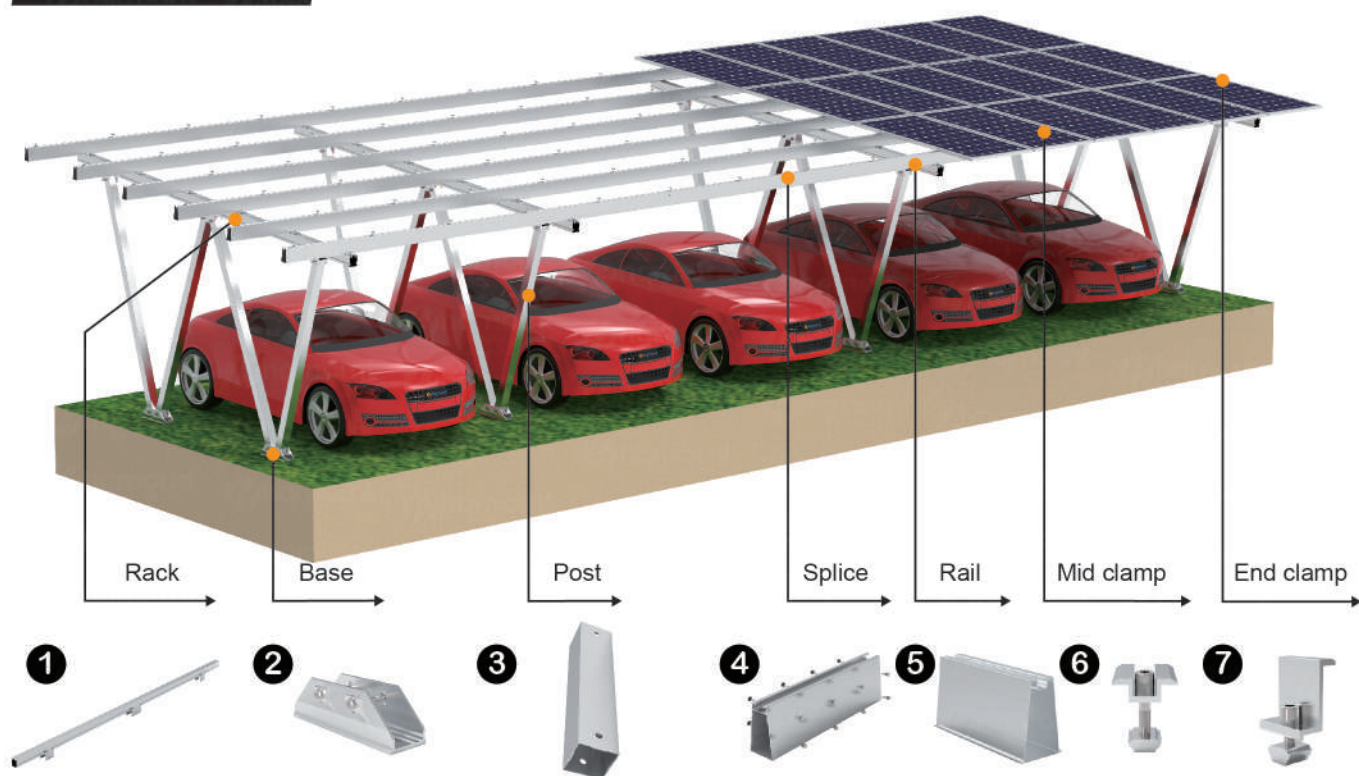
CARPORT MOUNTING SYSTEM SSC01

Installation manual

Email: info@hqmount.com
Web: www.hqmount.com



Components



Installation Tools



Laser level



String



Electrical drill



(M8, M12)
Socket wrench



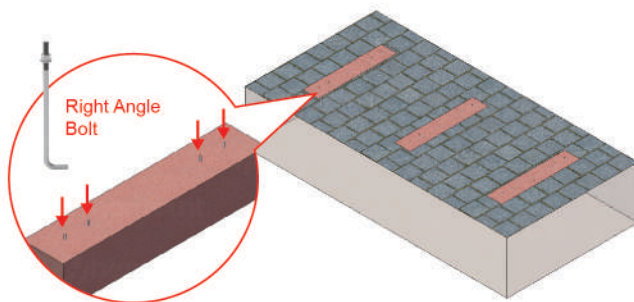
Tape measurement



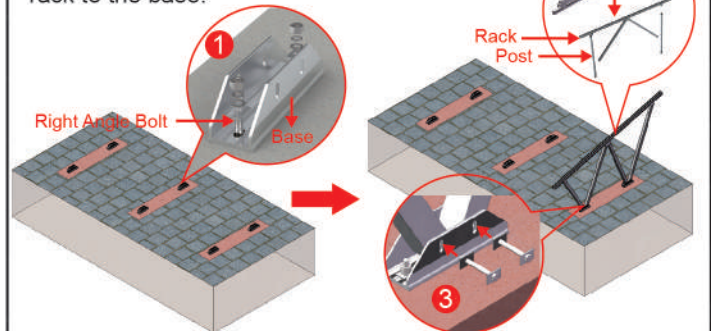
M8 Allen wrench


Step 1 Installation - Right angle bolt

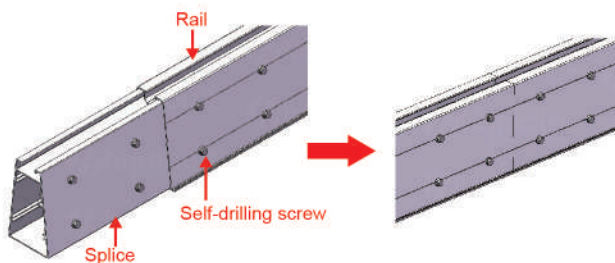
Pour the cement foundation according to the drawings, and ensure that the head of the anchor bolt protrudes 60 millimeters.


Step 2 Installation - Pre-assembled rack

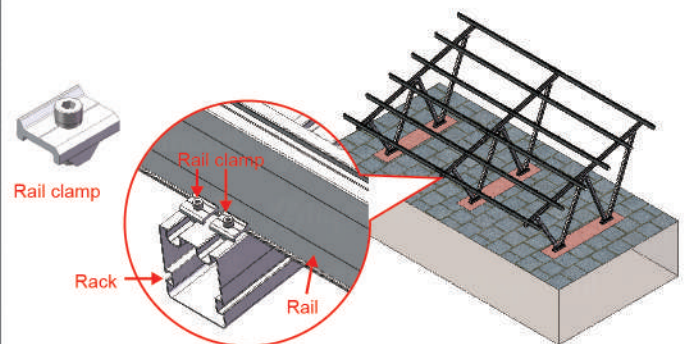
Install all the base on the right angle bolt according to the drawing, then unfolded the pre-assembled rack to the base.


Step 3 Installation - Splice

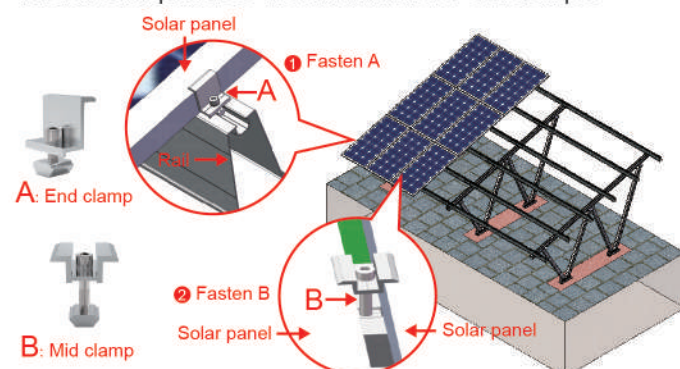
Connect 2 pcs of rails with Splice


Step 4 Installation - Rail

Fixing rails to the pre-assemble rack beam with rail clamps.


Step 5 Installation - Panel

Fasten solar panels to the rail with inter & end clamps.


Step 6 Installation-Completed
